

## AF-4500 Knob Menu Setup

The following knob menu setup has worked extremely well in our RV-10. The left and right knob menus can be set from the following menu:

EFIS -> SETTINGS -> MORE -> (PAGE LIST) -> KNOB LIST

### RIGHT KNOB



### LEFT KNOB



These settings simplify the user interface and group the items closer to where they are on the screen. Remember that screen dimming **DIM** is always on the right knob in the checklist page. You will always have a **ZOOM** menu item when a map is displayed.

We also highly recommend setting the knob menu selection set to **TURN SEL** and not **PUSH SEL**. The TURN SEL setting will enable you to turn the knob to move up and down the knob list rather than pushing it multiple times.